


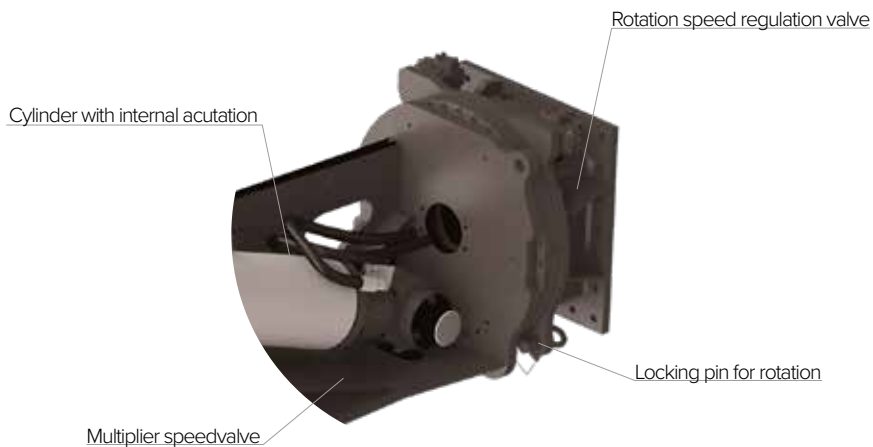

SCRAP SHEARS			HSS-2RV	HSS-3RV	HSS-6RV	HSS-10RV	HSS-14RV	HSS-22RV
 Excavator class ¹	t		1.5 - 3	4 - 5	5 - 8	8 - 12	12 - 18	18 - 23
 Weight	kg		185	300	610	1020	1360	2180
 Jaw opening	mm		150	265	335	405	465	530
 Jaw depth	mm		200	230	320	370	385	445
 Working pressure	bar		220	220	300	350	350	350
 Oilflow	l/min		20 - 25	80 - 100	80 - 150	100 - 150	150 - 250	180 - 250
 Working pressure rotation	bar		220	120	120	120	140	140
 Oilflow rotation	l/min		8	5	5	5	15 - 30	20 - 40
 Open/close	sec.		1.3 / 1.6	1.0 / 2.8	1.0 / 2.0	1.9 / 3.6	1.9 / 2.5	2.0 / 2.8

SCRAP SHEARS			HSS-28RV	HSS-34RV	HSS-45RV	HSS-52RV	HSS-62RV
 Excavator class ¹	t		23 - 32	30 - 42	40 - 55	52 - 65	55 - 78
 Weight	kg		2840	3360	4380	5160	6480
 Jaw opening	mm		595	620	660	725	795
 Jaw depth	mm		505	545	610	675	690
 Working pressure	bar		350	350	350	350	350
 Oilflow	l/min		200-300	200-300	300 - 400	350 - 450	400 - 500
 Working pressure rotation	bar		140	140	140	140	140
 Oilflow rotation	l/min		25 - 50	25 - 50	25 - 50	25 - 50	25 - 50
 Open/close	sec.		2.9 / 2.9	3.9 / 4.1	3.4 / 4.0	3.2 / 4.0	3.0 / 4.1

SCRAP SHEARS			HSS-82RV	HSS-110RV	HSS-140RV	HSS-180RV	HSS-220RV
 Excavator class ¹	t		75 - 100	100 - 150	140 - 170	140 - 210	200 - 280
 Weight	kg		8230	11680	14300	18340	21850
 Jaw opening	mm		845	930	1080	1100	1180
 Jaw depth	mm		710	960	1015	1080	1130
 Working pressure	bar		350	350	350	350	350
 Oilflow	l/min		450 - 600	500 - 800	600 - 900	700 - 1000	900 - 1200
 Working pressure rotation	bar		140	140	140	240	240
 Oilflow rotation	l/min		70	80	80	80	80
 Open/close	sec.		3.8 / 4.7	4.2 / 5.1	4.3 / 5.2	4.6 / 5.3	4.8 / 5.8

¹ Recommended excavator / attachment combination
Equipped with replaceable blades

